









 



Original	Replacement
Power	Power
TV	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
PRE-CH	+ Shift + Fav / Marker / PC
Vol+	Vol+
FAV.CH	Fav / Marker / PC
Vol-	Vol-
Mute	Mute / Dimmer

Original	Replacement
PR+	CH+ / Page+
PR-	CH- / Page-
Source	AV / Input / RDS
Info	Info / Angle
Menu	Menu / Home
Guide	Guide / EPG / -/--
Tools	Setup / OPT /
Return	Back / Return
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
CH List	Smart / List
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TTX/MIX	 Text / Goto
 AD	 Audio / Lang I/II
 SUBT.	 Subtitle / EQ

Original	Replacement

