




 
 
 
 
 
 
 
 
 

 
 

 
 
 


 
 
 





 





 

 
 

 

 



 


 


 


 
 
 


 
 
 
 
 
 
 

 
 
 




Original	Replacement	Original	Replacement
 Standby	 Power	 P+	 Ch +
 Source	 AV	 P-	 Ch -
 1	 1	 Menu	 Menu
 2	 2	 Guide	 Guide
 3	 3	 Tools	 Options
 4	 4	 Info	 Info
 5	 5	 Return / Back	 Back
 6	 6	 Exit	 Exit
 7	 7	 OK	 Ok
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 TTX/MIX	 Text	 Left	 Left
 PRE-CH	 Pre Ch	 Smart Hub	 Smart
 Mute	 Mute	 Red	 Red
 Vol+	 Vol +	 Green	 Green
 Vol-	 Vol -	 Yellow	 Yellow





Original		Replacement		Original		Replacement	
	Blue		Blue				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec		Rec				
	>>		>>				
	>>		>>				
	<<		<<				
	<<		<<				
	AD/Subt.		Subt				
	3D		3D				
	History		Format				
	Support		Dual				
	Camera	 + 	Shift + Smart				
	D		TV/R				
	CH List		List				

