







































 



















Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Info		Info / Angle
	Power		Power		Left		Left
	PP		Back / Return		Up		Up
	I-II		Audio / Lang I/II		P+		CH+ / Page+
	1		1		Right		Right
	2		2		Down		Down
	3		3		P-		CH- / Page-
	4		4		Vol-		Vol-
	5		5		Vol+		Vol+
	6		6		Red/Sound		Red / Netflix / Search
	7		7		Red/Sound		Sound / Title
	8		8		Green/Picture		Green / APP / Repeat
	9		9		Green/Picture		Picture / Format
	0		0		Yellow/Feature		Yellow / YouTube / Repeat
	--		Guide / EPG / -/--		Blue/Install		Blue / Prime Video / Random
	P<P		Fav / Marker / PC		TV		TV/Radio /
	Menu		Menu / Home		AV		AV / Input / RDS





Original	Replacement
[≡]	GOTO TEXT Text / Goto
[/≡]	SHIFT + GOTO TEXT Shift + Text /
[≡o]	TIMER SLEEP Sleep / Timer
[≡+]	HOLD Stop / Hold
[≡x]	OPT-TOOLS SETUP Setup / OPT /
[≡◆]	SIZE ZOOM Zoom / Size
[≡?]	LIST SMART Smart / List
[≡i]	MEDIA DISPLAY Display / Media

Original	Replacement

