

 


 
 



 

 

 

 

 

 
 
 



 

 

 
 
 
 
 


 
 


 

 
 
 
 

 

 
 
 
 
 
 
 

 

 

 

 
 
 


 








Original		Replacement		Original		Replacement	
	Standby		Power		Timer		AV
	Teletex		Text		Menu		Menu
	Red		Red		Mute		Mute
	Green/[] Smart		Green		P<P		Pre Ch
	Yellow/♪ Smart		Yellow		OK		Ok
	Blue		Blue		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		P+		Ch +
	5		5		P-		Ch -
	6		6		Vol+		Vol +
	7		7		Vol-		Vol -
	8		8		Play		Play
	9		9		Stop		Stop
	0		0		Record/OTR		Rec
	Clear		Exit		<<		<<





	Original	Replacement	Original	Replacement
	>>	 >>		
	>I/Index	 >>I >>I		
	>I</Still	 Pause		

