
 



 



























Original	Replacement
	 TV/Radio /
	 +  Shift + 1
	 Audio / Lang I/II
	 AV / Input / RDS
	 Power
	 1
	 2
	 3
	 Text / Goto
	 4
	 5
	 6
	 Subtitle / EQ
	 7
	 8
	 9
	 Sound / Title

Original	Replacement
	 Fav / Marker / PC
	 0
	 Info / Angle
	 Setup / OPT /
	 Exit / Cancel / Clear
	 Up
	 Smart / List
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 Back / Return
	 CH- / Page-





Original	Replacement	Original	Replacement
	Red Red / Netflix / Search		
	Green Green / APP / Repeat		
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	EPG Guide / EPG / -/--		
	Check Display / Media		

