


 






 







Original	Replacement
 TV/R	 TV/Radio /
 On/Off	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Menu	 Menu / Home
 0	 0
 Text	 Text / Goto
 Vol-	 Vol-
 P+	 CH+ / Page+
 Vol+	 Vol+

Original	Replacement
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 i	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/-
 Up	 Up
 Media	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Portal	 Smart / List
 <<	 << / Tune-





	Original	Replacement	Original	Replacement
	Play	 Play / Slow		
	>>	 >> / Tune+		
	Pause	 Pause / Step / Freeze		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		

