



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	Source (Games)		Eject / Surround
	Movie-Music-Phot		Picture / Format
	[≡]..		Zoom / Size
	* / O		Sleep / Timer
	TV		TV/Radio /
	Q.Menu		D.Menu / Top
	[-O-]		Setup / OPT /
	[≡]/Text		Text / Goto
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	World (Violet)		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	* / Q		Display / Media
	PR-		CH- / Page-
	1		1
	2		2





	Original	Replacement	Original	Replacement
	3 def	3		
	4 ghi	4		
	5 jkl	5		
	6 mno	6		
	7 pqrs	7		
	8 tuv	8		
	9 wxyz	9		
	Guide	GUIDE EPG		
	0	HDMI - BAT 0		
	Red	NETFLIX SEARCH		
	Green	APP REPEAT		
	Yellow	YouTube REPEAT A-B		
	Blue	Prime Video RANDOM		
	Recall	SHIFT + RETURN BACK		

