



Original	Replacement	Original	Replacement
Power Audio	Power	9	9
Power Tv	+ Shift + Power	0	0
Bluetooth Setting	Smart	10	Guide
Rec Mode	Rec	>10	Pre Ch
Title Search	+ Shift + TV/R	Sleep	Sleep
Tv/Video	TV/R	A.STBY	Media
Eco Dimmer	3D	Tv Channel +	Ch +
Display/Chara	Info	Clock/Timer	AV
Title Edit	D. Menu	Tv Channel -	Ch -
1/Marc	1	Tv Vol+	+ Shift + Vol +
2	2	Tv Vol-	+ Shift + Vol -
3	3	Return	Back
4	4	Top Menu/PG	+ Shift + Menu
5	5	Menu/PL	Menu
6	6	Audio Vol+	Vol +
7	7	Audio Vol-	Vol -
8	8	Cancel	Exit





Original	Replacement	Original	Replacement
Fade Muting	Mute	Tuner/Play	+ Shift + Play
On Screen	+ Shift + Info	Play/Pause	Red
Up	Up	Play/Pause	Green
Down	Down	Play/Pause	Yellow
Right	Right	Play/Pause Bluetooth	Blue
Left	Left	Audio/MPX	Dual
Enter/Set	Ok	Subtitle	Subt
Stop	Stop	Zoom	Eject
Play	Play	FM/AM/Audio In	Format
Pause	Pause	File Type	+ Shift + Subt
I<<	I<<	Angle	List
I>>	I>>	Set Up	Options
I<< Group/Title Skip	+ Shift + I<<	VFP/Scan Mode	+ Shift + 1
I>> Group/Title Skip	+ Shift + I>>	3D Phonic/HP Surr	+ Shift + 2
<<	<<	C.Voice	+ Shift + Mute
>>	>>	DVD/Audio In	+ Shift + 3
>> Group/Title	+ Shift + >>	Sound Mode	+ Shift + Dual



