



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Mark		Info
	Sub Title		Subt
	Title Menu		D. Menu
	Zoom		Shift + Eject
	Menu		Menu
	Options		Shift + Options
	Play/Pause		Play
	Play/Pause		Pause
	Stop/Eject		Stop
	<</I<<		<<
	>>/>>I		>>
	Stop/Eject		Eject





Original		Replacement		Original		Replacement	
	Setup		Options				
	HDD		TV/R				
	DVD		3D				
	Erase		Exit				
	Audio		Dual				
	Kiss Online		Smart				
	PC Link		Media				
	Angle		Text				

