



 







 

 
 

 


















 



 



 



 



 

 

 















Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 EPG	 Guide / EPG / -/--	 Display	 Display / Media
 REP	 TV/Radio /	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 Rec List	 Shift + Rec / Rec Mode	 Right	 Right
 CH List	 Smart / List	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Eject	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode	 1	 1
 Stop	 Stop / Hold	 2	 2
 I<<	 I<< / Preset-	 3	 3
 >>I	 >>I / Preset+	 4	 4
 Pause	 Pause / Step / Freeze	 5	 5
 Play	 Play / Slow	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 Source	 AV / Input / RDS	 9	 9





Original	Replacement	Original	Replacement
0	0	HDMI - BAT	0
↶	Recall	RETURN	Back / Return
FAV	Fav	PC FAV MARKER	Fav / Marker / PC
▲	Vol +	+	Vol+
PICTURE	Picture	FORMAT	Picture / Format
NICAM/A2	Nicam / A2	LANG / I / I	Audio / Lang / I/II
▲	CH +	+	CH+ / Page+
▼	Vol -	-	Vol-
SOUND	Sound	TITLE	Sound / Title
SLEEP	Sleep	TIMER	Sleep / Timer
▼	CH -	-	CH- / Page-
Red	Red	NETFLIX	Red / Netflix / Search
Green	Green	APP	Green / APP / Repeat
Yellow	Yellow	YouTube	Yellow / YouTube / Repeat
Blue	Blue / Screen	Prime Video	Blue / Prime Video / Random
TV/TXT	Setup / TV/Txt	OPT-TOOLS	Setup / OPT /
CANCEL	D-Menu /	TOP MENU	D.Menu / Top

Original	Replacement	Original	Replacement
REVEAL	Title / Reveal	SHIFT + TITLE	Shift + Sound / Title
PRO	PRO	SHIFT + MEDIA	Shift + Display / Media
HOLD	LAN / Hold	SHIFT + LIST	Shift + Smart / List
SIZE	Size / A-B	SIZE	Zoom / Size
SUBPAGE	Goto / Subpage	GOTO	Text / Goto
INDEX	Index / Slow	ANGLE	Info / Angle



Cancel Menu