





















Original	Replacement
	 D.Menu / Top
	 Menu / Home
	 Smart / List
	 Power
	 Display / Media
	 Info / Angle
	 Sleep / Timer
	 TV/Radio /
	 Up
	 Left
	 OK
	 Right
	 Down
	 Mute / Dimmer
	 Audio / Lang I/II
	 Back / Return
	 1

Original	Replacement
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0

