














 



 



 



 

 

 





 

 

Original	Replacement
 Open / Close	 Eject / Surround
 Power	 Power
 V.Mode	 Picture / Format
 Title	 Sound / Title
 Subtitle	 Subtitle / EQ
 Menu	 Menu / Home
 Repeat	 Green / APP / Repeat
 A-B RPT	 Yellow / YouTube / Repeat
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 OSD	 Display / Media
 N/P	 Red / Netflix / Search
 0	 0
 Setup	 Setup / OPT /
 Up	 Up
 Intro	 OK
 Left	 Left
 Play	 Play / Slow
 Right	 Right
 Zoom	 Zoom / Size
 Down	 Down
 Prog	 TV/Radio /
 CH+	 CH+ / Page+
 Rec	 Rec / Rec Mode
 CH-	 CH- / Page-





Original	Replacement
 Timer	 Sleep / Timer
 Quality	 Blue / Prime Video / Random
 Disc	 D.Menu / Top
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 >>>I	 >>>I / Preset+
 Pause / Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <I Slow	 Shift + Left
 Slow I>	 Shift + Right
 DVD	 Shift + 2
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Volume+	 Vol+
 Source	 AV / Input / RDS
 Book Mark	 Fav / Marker / PC

Original	Replacement
 Edit	 Text / Goto
 Chap Mark	 Smart / List

