











































 


















 








Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		Back		Back / Return
	3		3		Exit		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Wheel Up		>> / Preset+
	8		8		Right		Right
	9		9		Wheel Down		<< / Preset-
	List		Smart / List		Down		Down
	0		0		Guide		Guide / EPG / -/-
	Info		Info / Angle		3D		Shift + 3
	Vol+		Vol+		*/Settings		D.Menu / Top
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	P+		CH+ / Page+		Green		Green / APP / Repeat





Original		Replacement		Original		Replacement	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Text		Text / Goto				
	T.Opt		Setup / OPT /				
	Subt.		Subtitle / EQ				

