





 




 
 
 
 
 
 
 

 
 

 
 
 
 
 

 
 

 
 
 
 
 
 
 
 
 
 

 
 
 
 


 
 


 

 
 


 
 









 



 

 
 

 




Original		Replacement		Original		Replacement	
	Standby		Power		P-		Ch -
	STB PWR		Shift + Power		Mute		Mute
	1		1		Micro/Q		Format
	2		2		Home/Recents		TV/R
	3		3		*		Menu
	4		4		Back/Exit		Back
	5		5		Guide		Guide
	6		6		Mouse Up		>>
	7		7		Mouse Down		<<
	8		8		OK		Ok
	9		9		Up		Up
	0/Quick Access		0		Down		Down
	List		List		Right		Right
	AD		Subt		Left		Left
	Vol+		Vol +		Netflix		Shift + Media
	Vol-		Vol -		Amazon		Media
	P+		Ch +		Source		AV





Original		Replacement		Original		Replacement	
	Text		Text				
	T.Opt/Magic Link		Options				
	Info		Info				
	Play		Play				
	Pause		Pause				
	Live		3D				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

