








 











 

 














 
 



 


 

 
 



 





 












 

 

 

 


 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Info	 Info	 Vol-	 Vol -
 AV Mode	 Media	 CH+	 Ch +
 Input	 AV	 CH-	 Ch -
 e/Energy Saving	 3D	 Mute	 Mute
 1	 1	 Enter	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Menu	 Menu
 7	 7	 Return	 Back
 8	 8	 Red	 Red
 9	 9	 Green	 Green
 0	 0	 Stop	 Stop
 -/List	 List	 Yellow	 Yellow
 FlashBK	 Dual	 Blue	 Blue





Original		Replacement		Original		Replacement	
	Play		Play				
	Pause		Pause				
	Q.Menu		D. Menu				
	<<		<<				
	>>		>>				
	Simplink		Smart				
	FAV/Mark		Pre Ch				

