

 

 




 
 



 



 



 



 



 



















 
 


 



 













Original	Replacement	Original	Replacement
 Power	 Power	 Mute Tv	 Mute / Dimmer
 Open/Close	 Eject / Surround	 Vol- Tv	 Vol-
 Power Tv	 Shift + Power	 <<	 << / Tune-
 AV Tv	 AV / Input / RDS	 >>	 >> / Tune+
 1	 1	 I<<	 I<< / Preset-
 2	 2	 I>>	 I>> / Preset+
 3	 3	 Pause/Step	 Pause / Step / Freeze
 PR+ Tv	 CH+ / Page+	 Play	 Play / Slow
 4	 4	 Stop	 Stop / Hold
 5	 5	 Display	 Display / Media
 6	 6	 Up	 Up
 PR- Tv	 CH- / Page-	 Setup	 Setup / OPT /
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Right	 Right
 Vol+ Tv	 Vol+	 Disc Menu	 D.Menu / Top
 0	 0	 Down	 Down









Original	Replacement
Power	Power
Eject	Eject / Surround
AV	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv/VCR	TV/Radio /
0	0
<<	<< / Tune-
>>	>> / Tune+
Pause/Step	Pause / Step / Freeze

Original	Replacement
Play	Play / Slow
Stop	Stop / Hold
CLK/CNT	Display / Media
Up	Up
PR/TRK+	CH+ / Page+
i	Info / Angle
Left	Left
Enter	OK
Right	Right
PR/TRK-	CH- / Page-
Down	Down
O)))/Audio	Audio / Lang I/II
Rec/ITR	Rec / Rec Mode
Lock	Back / Return
Search	Red / Netflix / Search
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat



