



























































 









| Original | Replacement | Original | Replacement |
|----------------|---|-----------------------------|---|
| Power |  | Power |  |
| OK |  | OK |  |
| Up |  | Up |  |
| Down |  | Down |  |
| Right |  | Right |  |
| Left |  | Left |  |
| Back |  | Back / Return |  |
| Vol + |  | Vol+ |  |
| Vol - |  | Vol- |  |
| Home / Smart |  | Menu / Home |  |
| 3D |  | Shift + 3 |  |
| Mute |  | Mute / Dimmer |  |
| P + |  | CH+ / Page+ |  |
| P - |  | CH- / Page- |  |
| Ratio |  | Picture / Format |  |
| List |  | Smart / List |  |
| Q.Menu |  | D.Menu / Top |  |
| Subtitle |  | Subtitle / EQ |  |
| Settings |  | Setup / OPT / |  |
| >> |  | >>I / Preset+ |  |
| >> |  | >> / Tune+ |  |
| Play |  | Play / Slow |  |
| AD / PIP |  | Sound / Title |  |
| << |  | I<< / Preset- |  |
| << |  | << / Tune- |  |
| Rec |  | Rec / Rec Mode |  |
| Pause |  | Pause / Step / Freeze |  |
| Text |  | Text / Goto |  |
| FAV |  | Fav / Marker / PC |  |
| Exit |  | Exit / Cancel / Clear |  |
| Input |  | AV / Input / RDS |  |
| Blue |  | Blue / Prime Video / Random |  |
| Yellow |  | Yellow / YouTube / Repeat |  |
| Stop / Live TV |  | Stop / Hold |  |



