

 
 
 









 
 

 



 

 
 
 
 
 
 
 
 
 
 
 


 



 
 

 
 
 





 
 
 

 
 






 
 

 
 
 
 
 



 

 

 



 

 



 

 
 

 
 
 




Original		Replacement		Original		Replacement	
	Power		Power		>>		>>
	Open/Close		Eject		>>I		>>I
	Radio & Input		AV		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Speaker Level		Dual
	4		4		Sound Effect		Subt
	5		5		Optical		Options
	6		6		Vol+		Vol +
	7		7		Vol-		Vol -
	8		8		Mute		Mute
	9		9		Home		Smart
	0		0		3D Sound		3D
	Clear		Exit		Info/Display		Info
	Repeat		Text		Back		Back
	I<<<		I<<<		Title/Pop Up		Media
	<<<		<<<		Disc Menu		D. Menu





Original	Replacement	Original	Replacement
 Up/Preset+	 Up	 Vol- TV	 Shift + Vol -
 Down/Preset-	 Down	 PR/CH+ Tv	 Ch +
 Right/Tuning+	 Right	 PR/CH- Tv	 Ch -
 Left/Tuning-	 Left		
 Enter	 Ok		
 Red/RDS	 Red		
 Green/PTY	 Green		
 Yellow/PTY Search	 Yellow		
 Blue/Mono/Stereo	 Blue		
 Marker	 Format		
 Search	 TV/R		
 Sleep	 Sleep		
 Music ID	 List		
 Rec	 Rec		
 Power Tv	 Shift + Power		
 AV Input TV	 Shift + AV		
 Vol+ TV	 Shift + Vol +		

