




































Original	Replacement
 Power	 Power
 Eject/Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 VCR	 Shift + 4
 Av Input	 AV / Input / RDS
 AV Input Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 CH- / Page-
 7	 7
 8	 8

Original	Replacement
 9	 9
 Vol+ Tv	 Vol+
 I.Skip	 Blue / Prime Video / Random
 0	 0
 Dubbing	 Yellow / YouTube / Repeat
 Vol- Tv	 Vol-
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause/step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 Up/PR/CH/(TRK)	 Up
 Disc Menu/List	 D.Menu / Top
 Disc Menu/List	 Smart / List





Original	Replacement
	Left
	Enter
	Right
	Display
	Down/PR/CH/TRK
	Return
	O)/Audio
	Subtitle
	Zoom
	CHP.Add
	Rec
	Rec Mode
	Title
	Thumbnail
	Play Mode
	Marker
	Search
	Left
	OK
	Right
	Display / Media
	Down
	Back / Return
	Audio / Lang I/II
	Subtitle / EQ
	Zoom / Size
	Green / APP / Repeat
	Rec / Rec Mode
	Shift + Rec / Rec Mode
	Sound / Title
	Picture / Format
	Shift + Play /
	Fav / Marker / PC
	Red / Netflix / Search

Original	Replacement
	Clear
	TV/Radio /
	Guide / EPG / -/--
	Shift + Guide / EPG / -/--
	Setup / OPT /
	Exit / Cancel / Clear
	TV/Radio /
	Guide / EPG / -/--
	Shift + Guide / EPG / -/--
	Setup / OPT /

