 


 
 


 






 
 

 

 

 
 


 



 











 



 
 
 
 






 


 







 
 
 
 
 




 


 
 
 
 


 
 

 


 
 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Mute	 Mute	 Setup	 Options
 Function	 Smart	 Display	 Info
 Input	 AV	 Up / Preset+	 Up
 Sleep	 Sleep	 Down / Preset-	 Down
 Return	 Back	 Right / Tun+	 Right
 EQ	 Red	 Left / Tun-	 Left
 VSM	 Green	 Enter	 Ok
 1	 1	 Menu	 Menu
 2	 2	 Title	 3D
 3	 3	 << / Scan-	 <<
 4	 4	 >> / Scan+	 >>
 5	 5	 Play	 Play
 6	 6	 I<< / Skip-	 I<<
 7	 7	 >>I / Skip+	 >>I
 8	 8	 Pause / Step	 Pause
 9	 9	 Prog. Memo.	 TV/R





	Original	Replacement	Original	Replacement
	Rec	 Rec		
	Stop	 Stop		
	Volume+	 Vol +		
	Volume-	 Vol -		
	Repeat	 Text		
	S-Title	 Subt		
	RDS	 Yellow		
	PTY	 Blue		
	HT SPK	 Dual		
	Clear	 Exit		
	TV Power	 Shift + Power		
	TV Input	 Shift + AV		
	TV Prog+	 Shift + Ch +		
	TV Prog-	 Shift + Ch -		
	TV Vol+	 Shift + Vol +		
	TV Vol-	 Shift + Vol -		

