 

 

 
 


 

 
 

 
 





 




 




 
 

 




 
 
 
 


 










	Original	Replacement		Original	Replacement
	Power		Power		>>I
	Eject		Eject		Pause/Step
	1		1		Play
	2		2		Stop
	3		3		Up
	4		4		PR/TRK+
	5		5		PR/TRK-
	6		6		Down
	7		7		Right
	8		8		Left
	9		9		OK/Enter
	0		0		Display/CLK/CN
	Tv/VCR		TV/R		i/Setup
	AV		AV		Disc Menu
	<<		<<		Return
	>>		>>		O)/Audio
	I<<		I<<		[...]/Subtitle





 

 


 
 



 
 

 
 


 




 
 







 

 
 
 




 
 
 
 
 

 
 




 
 









 



 
	Original	Replacement		Replacement
	Camera/Angle		Red	
	Zoom		Shift + Eject	
	Rec/ITR		Rec	
	Lock		Pre Ch	
	Title		Guide	
	Program		Sleep	
	Marker		Green	
	Search		Shift + TV/R	
	Clear		Exit	
	Repeat		Text	
	A-B/LP		Yellow	
	Random/CM		Blue	
	ShowView		Media	
	Power Tv		Shift + Power	
	*		Shift + 3D	
	AV Tv		Shift + AV	
	PR+ Tv		Shift + Ch +	

	Original	Replacement
	PR- Tv	
	Vol+ Tv	
	Vol- Tv	










 


 

 

 






 




 



 


 














 


Original	Replacement	Original	Replacement
 Power	 Power	 >>I	 >>I
 Open/Close	 Eject	 Pause/Step	 Pause
 1	 1	 Play	 Play
 2	 2	 Stop	 Stop
 3	 3	 Display/CLK/CN	 3D
 4	 4	 i/Setup	 Info
 5	 5	 Disc Menu	 D. Menu
 6	 6	 Return	 Back
 7	 7	 Up	 Up
 8	 8	 PR/TRK+	 Ch +
 9	 9	 PR/TRK-	 Ch -
 0	 0	 Down	 Down
 Tv/VCR	 TV/R	 Right	 Right
 AV	 AV	 Left	 Left
 <<	 <<	 OK/Enter	 Ok
 >>	 >>	 O)/Audio	 Dual
 I<<	 I<<	 [...]/Subtitle	 Subt





Original	Replacement
 Camera/Angle	 Red
 Zoom	 +  Shift + Eject
 Rec/ITR	 Rec
 Lock	 Pre Ch
 Title	 Guide
 Program	 Sleep
 Marker	 Green
 Search	 +  Shift + TV/R
 Clear	 Exit
 Repeat	 Text
 A-B/LP	 Yellow
 Random/CM	 Blue
 ShowView	 Media
 *	 +  Shift + 3D
 Power Tv	 +  Shift + Power
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -

Original	Replacement
 PR+ Tv	 +  Shift + Ch +
 PR- Tv	 +  Shift + Ch -
 AV Tv	 +  Shift + AV

