

Original	Replacement	Original	Replacement
Power		Power	
Mute		Mute	
CD Play/Pause		Play	
CD Play/Pause		Pause	
CD Stop		Stop	
TAPE Rec		Rec	
CD ICD I<< <<		I<<	
TAPE <<		<<	
TAPE >>		>>	
CD >> >>I		>>I	
D.Skip		List	
SURR		Dual	
Program		Options	
Sleep		Sleep	
Repeat		Text	
TAPE Rev. Play		Left	
TAPE Stop		Ok	
TAPE Play		Right	
Volume+		Vol +	
EQ Patt.		Smart	
Preset+		Ch +	
Volume-		Vol -	
XDSS		Media	
Preset-		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	



Power button (red circle with power symbol), MUTE button (black circle with 'MUTE'), SHIFT button (orange circle with 'SHIFT').

TV (blue), DVD (blue), SAT (blue), AUX (blue).

PLAY MODE: Play, Pause, Stop, Fast Forward, Rewind.

DISC NAV: LIST, DUAL, AD, SETTINGS.

PROG: SLEEP, SEARCH, PICTURE, ECO.

E-MANUAL: TV/R, FORMAT, 3D.

D.MENU: REPEAT, ZOOM, TIMER, AV.

Central navigation pad: OK, Up, Down, Left, Right arrows.

CLEAR/EXIT, HOME, SMART, APP, MEDIA, RETURN/BACK.

Numeric keypad (0-9), GUIDE, FAV, PRE-CH.

Bottom row: A (red), B (green), C (orange), D (blue).

Mandis shop logo and website address: www.mandis.tv.