







 




 
 








 








 











 


 






 




 


 








| Original  | Replacement  | Original  | Replacement  |
|---|--|---|--|
|  Power           |  Power        |  Pause/Step          |  Pause    |
|  Radio/Input     |  TV/R         |  I<< Skip            |  I<<      |
|  Open/Close      |  Eject        |  << Scan             |  <<       |
|  Marker          |  Subt         |  Scan >>             |  >>       |
|  Search          |  Shift + TV/R |  Skip >>I            |  >>I      |
|  Info/Display    |  Info         |  Speaker Level       |  Media    |
|  Home            |  Smart        |  Sound Effect        |  Dual     |
|  Disc Menu       |  D. Menu      |  Vol +               |  Vol +    |
|  Back            |  Back         |  Vol -               |  Vol -    |
|  Title/Popup     |  Guide        |  Mute                |  Mute     |
|  Up/Preset+     |  Up          |  Optical            |  Options |
|  Down/Preset-  |  Down       |  Red/RDS           |  Red    |
|  Right/Tuning+ |  Right      |  Green/PTY         |  Green  |
|  Left/Tuning-  |  Left       |  Yellow/PTY Search |  Yellow |
|  Enter         |  Ok         |  Blue/Mono Stereo  |  Blue   |
|  Stop          |  Stop       |  1                 |  1      |
|  Play          |  Play       |  2                 |  2      |





| Original  | Replacement           |
|-----------|-----------------------|
| DEF<br>3  | 3                     |
| GHI<br>4  | 4                     |
| JKL<br>5  | 5                     |
| MNO<br>6  | 6                     |
| PQRS<br>7 | 7                     |
| TUV<br>8  | 8                     |
| WXYZ<br>9 | 9                     |
| 0         | 0                     |
| CLEAR     | EXIT                  |
| REPEAT    | TEXT                  |
| SLEEP     | SLEEP                 |
| REC       | REC MODE              |
| *         | ECO<br>3D             |
| *         | TIMER<br>AV           |
| POWER     | SHIFT + [POWER]       |
| AV/INPUT  | SHIFT + [TIMER<br>AV] |
| PR/CH     | +<br>CH               |

| Original   | Replacement      |
|------------|------------------|
| PR/CH<br>v | CH -<br>Ch -     |
| +<br>VOL   | SHIFT + +<br>VOL |
| -<br>VOL   | SHIFT + -<br>VOL |
| MUTE       | SHIFT + MUTE     |

