
















 

 

 


 
 

 
 
 


 



 
 

 









 


 


 
 


 











 
 
 

 
 

 
 
 
 

 

 
 
 






Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	Mute		Mute		1		1
	TV		TV/R		2		2
	Input		AV		3		3
	I/II		Dual		4		4
	List		List		5		5
	Menu		Menu		6		6
	Q.View		Options		7		7
	Up		Up		8		8
	Down		Down		9		9
	Right		Right		0		0
	Left		Left		SSM		Guide
	OK		Ok		PSM		Pre Ch
	PR+		Ch +		Sleep		Sleep
	PR-		Ch -		[≡]/Text		Text
	Vol+		Vol +		*		Smart
	Vol-		Vol -		Blue		Blue





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Green		Green				
	Red		Red				
	[≡x]/Update		Subt				
	[≡o]/Time		Eject				
	[≡♦]/Size		Format				
	[≡?]/Reveal		3D				
	[≡+]/Hold		Back				
	[≡i]/Index		Info				
	[≡M]/Mode		Media				
	[= ]/Mix		D. Menu				

