



Original	Replacement
Power	Power
Open/Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Exit / Cancel / Clear
<<	<< / Tune-
>>	>> / Tune+
<<	<< / Preset-
>>	>> / Preset+

Original	Replacement
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
Stop	Stop / Hold
DVD Menu	D.Menu / Top
Title	Sound / Title
Up	Up
Enter	OK
Down	Down
Right	Right
Left	Left
Return	Back / Return
Display	Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Setup	Setup / OPT /
Marker	Fav / Marker / PC



