














 



 














Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide/List		Guide / EPG / -/--
	0/Quick Access		0
	.../AD/SAP		Fav / Marker / PC
	Vol+		Vol+
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol-		Vol-

Original	Replacement	Original	Replacement
	CH-		CH- / Page-
	Home		Menu / Home
	Voice		Display / Media
	Sources		AV / Input / RDS
	Up		Up
	Left		Left
	Wheel Up		>> / Preset+
	Right		Right
	Wheel Down		<< / Preset-
	OK		OK
	Down		Down
	Back		Back / Return
	*		D.Menu / Top
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Original	Replacement	Original	Replacement
Netflix	+ Shift + Red / Netflix /		
prime video	+ Shift + Blue / Prime		
Disney+	TV/Radio /		
Rakuten TV	Picture / Format		
Smart Colors	Smart / List		
Alexa	Zoom / Size		

