





 













 






























 
 
 



 
 


 
 








Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	...		Fav / Marker / PC
	Vol+		Vol+
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol-		Vol-

Original	Replacement	Original	Replacement
	CH-		CH- / Page-
	Micro		Display / Media
	Home		Menu / Home
	Wire		AV / Input / RDS
	Wheel Up		Up
	OK		OK
	Wheel Down		Down
	Back		Back / Return
	Setting		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Netflix		Shift + Red / Netflix /
	Prime Video		Shift + Blue / Prime /
	Disney+		Shift + Green / APP /
	Rakuten TV		Shift + Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
	Smart / List		
	+  Shift + Smart / List		

