

























 







 

















 








Original	Replacement
On/Off	 Power
3.*	 +  3 Shift + 3
Store	 SETUP Setup / OPT /
Reveal	 Play / Slow
On/Off	 +  Shift + Power
Tune+	 >> / Tune+
Tune-	 << / Tune-
4	 4 4
5	 5 5
6	 6 6
7	 7 7
8	 8 8
9	 9 9
Guide -/-- 1.	 Guide / EPG / -/--
0/10	 0 0
2.Fav P/C 2.	 Fav / Marker / PC
Red	 Red / Netflix / Search

Original	Replacement
Green	 Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random
Tone-	 I<< / Preset-
Tone+	 >>I / Preset+
3	 3 3
Audio+	 +  Shift + Vol+
Search	 +  Shift + Red / Netflix /
4.# 16:9	 Picture / Format
Surround	 Eject / Surround
Nicam/Mono	 +  Shift + Audio / Lang I/II
Level L	 +  Shift + Left
Level R/Woofer	 +  Shift + Right
Display	 DISPLAY Display / Media
Mute	 Mute / Dimmer
Txt Stop	 Stop / Hold
Info	 Info / Angle



Original	Replacement	Original	Replacement
Subt.List	 Subtitle / EQ	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Menu audio	 Audio / Lang I/II
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top	1	 1
Text	 Text / Goto	2	 2
Txt Expand	 Zoom / Size		
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		

