



Original	Replacement
	Power
	Sleep / Timer
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Fav / Marker / PC
	0
	Back / Return
	Smart / List
	Sound / Title

Original	Replacement
	AV / Input / RDS
	Menu / Home
	Up
	Left
	OK
	Right
	Vol+
	Down
	CH+ / Page+
	Vol-
	CH- / Page-
	Exit / Cancel / Clear
	Info / Angle
	Picture / Format
	Audio / Lang I/II
	[/=]/Mix
	[=x]/Cancel



Program

