





 






 












 







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / AV	 0
 0 / AV	 AV / Input / RDS
 CH/TR. -	 CH- / Page-
 CH/TR. +	 CH+ / Page+
 Rec / OTR	 Rec / Rec Mode
 Up / Play / Slow	 Up
 Up / Play / Slow	 Play / Slow

Original	Replacement
 Pause / Still	 Pause / Step / Freeze
 Left / << / l<<	 Left
 Left / << / l<<	 << / Tune-
 Left / << / l<<	 l<< / Preset-
 Right / >> / >>l	 Right
 Right / >> / >>l	 >>l / Preset+
 Right / >> / >>l	 >> / Tune+
 Down / Stop	 Down
 Down / Stop	 Stop / Hold
 Enter	 OK
 Index	 Info / Angle
 Cancel	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Timer Rec	 Sleep / Timer
 Program	 TV/Radio /
 Call	 D.Menu / Top
 Clock / Counter	 Red / Netflix / Search





Original	Replacement	Original	Replacement
 Counter Reset	 Green / APP / Repeat		
 Zero / Return	 Yellow / YouTube / Repeat		
 Zero / Return	 Back / Return		
 Speed SP/LP	 Display / Media		
 TV / VCR	 Smart / List		
 Audio Select	 Audio / Lang I/II		
 Eject	 Eject / Surround		

