



 

 







 












 



 



















 







Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Audio	 Audio / Lang I/II
 O/Pop-Up-M	 Smart / List
 →[]←/Zoom	 Zoom / Size
 Sound	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 0/AV	 AV / Input / RDS

Original	Replacement
 EPG/Repeat	 Shift + Green / APP / REPEAT
 EPG/Repeat	 Guide / EPG / -/-
 Assist	 Display / Media
 PIP/[]	 Picture / Format
 Text/Disc-M	 D.Menu / Top
 Text/Disc-M	 Text / Goto
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 Vol+	 Vol+
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-



 





 













 



















 





 



 


 





Original		Replacement		Original		Replacement	
	P-		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue/Marker		Blue / Prime Video / Random				
	Blue/Marker		Fav / Marker / PC				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec/HDMI		Rec / Rec Mode				
	Rec/HDMI		Shift + 0				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				





 















Original	Replacement
 Power	 Power
 O/Pop-Up-M	 Smart / List
 →[]←/Zoom	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 0/AV	 AV / Input / RDS
 EPG/Repeat	 Shift + Green / APP / Repeat
 EPG/Repeat	 Guide / EPG / -/--
 Assist	 Display / Media

Original	Replacement
 PIP/[]	 Picture / Format
 Text/Disc-M	 D.Menu / Top
 Text/Disc-M	 Text / Goto
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/Marker	 Blue / Prime Video / Random



 





 













 















Original	Replacement	Original	Replacement
 Blue/Marker	 Fav / Marker / PC		
 <<<	 <<< / Tune-		
 Play	 Play / Slow		
 >>>	 >>> / Tune+		
 Rec/HDMI	 Rec / Rec Mode		
 Rec/HDMI	 Shift + 0		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		





 















Original	Replacement
 Power	 Power
 O/Pop-Up-M	 Smart / List
 →[]←/Zoom	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 AV / Input / RDS
 0/AV	 0
 EPG/Repeat	 Shift + Green / APP / Repeat
 EPG/Repeat	 Guide / EPG / -/--
 Assist	 Display / Media

Original	Replacement
 PIP/[]	 Picture / Format
 Text/Disc-M	 D.Menu / Top
 Text/Disc-M	 Text / Goto
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/Marker	 Blue / Prime Video / Random





	Original	Replacement	Original	Replacement
	 Blue/Marker	 Fav / Marker / PC		
	 <<	 << / Tune-		
	 Play	 Play / Slow		
	 >>	 >> / Tune+		
	 Rec/HDMI	 Shift + 0		
	 Rec/HDMI	 Rec / Rec Mode		
	 Pause	 Pause / Step / Freeze		
	 Stop	 Stop / Hold		

