



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	Source (Games)		Eject / Surround
	Movie-Music-Phot		Picture / Format
	[≡]..		Zoom / Size
	*/O		Sleep / Timer
	TV		TV/Radio /
	Q.Menu		D.Menu / Top
	[-O-]		Setup / OPT /
	[≡]/Text		Text / Goto
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	World (Violet)		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	*/Q		Display / Media
	PR-		CH- / Page-
	1		1
	2		2





Original	Replacement	Original	Replacement
 3 def	3		3
 4 ghi	4		4
 5 jkl	5		5
 6 mno	6		6
 7 pqrs	7		7
 8 tuv	8		8
 9 wxyz	9		9
 Guide	Guide / EPG / -/--		Guide / EPG / -/--
 0	0		0
 Red	Red / Netflix / Search		Red / Netflix / Search
 Green	Green / APP / Repeat		Green / APP / Repeat
 Yellow	Yellow / YouTube / Repeat		Yellow / YouTube / Repeat
 Blue	Blue / Prime Video / Random		Blue / Prime Video / Random
 Recall	Shift + Back / Return		Shift + Back / Return

Original	Replacement

