





 





 













 


















 
 

 



 

 



























 











 





Original		Replacement		Original		Replacement	
	Power		Power		V-		Vol-
	Source		AV / Input / RDS		World/Internet		Smart / List
	1		1		P-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Q.Menu		D.Menu / Top
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Down		Down
	9		9		Back		Back / Return
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		i		Info / Angle
	Recall		Fav / Marker / PC		Music/Camera		Display / Media
	V+		Vol+		TV Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer		*/O		Shift + 1
	P+		CH+ / Page+		*/Q		Shift + 2





Original	Replacement
 [=]/Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Lang	 Audio / Lang I/II
 [=]..	 Sound / Title
 [-O-]	 Setup / OPT /
 <<	 << / Tune-
	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 ▶	 Play / Slow
 ■	 Stop / Hold

Original	Replacement

