




 
 
 
 
 



 












 



 

 

 



 









 
 


 
 
 
 
 

 









 


 
 









Original		Replacement		Original		Replacement	
	Power		Power		Play		Play
	Premium On		Smart		Pause		Pause
	Guida		Guide		>>		>>
	Lista		List		<<		<<
	Info		Info		1		1
	Vol+		Vol +		2		2
	Vol-		Vol -		3		3
	Prog+		Ch +		4		4
	Prog-		Ch -		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	OK		Ok		0		0
	Back		Back		Menu		Menu
	Exit		Exit		Opzioni		Options
	Stop		Stop		Text		Text





Original	Replacement	Original	Replacement
 APP	 Media		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue/Recall	 Blue		

Original	Replacement

