



 


 

 










 

 












 


 

 



 
 




 
 

 


 

 


 
 

 
 






Original	Replacement	Original	Replacement
	Power		Power
	Premium On		Smart
	Guida		Guide
	Menu		Menu
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Back		Back
	Exit		Exit
	Stop		Stop
	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lista		List
	Opzioni		Options
	Red		Red





	Original	Replacement		Original	Replacement
	Green				
	Yellow				
	Blue				
	Text				
	APP				
	Recall				

	Original	Replacement

