



| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Power |  Power |  4 |  4 |
|  Red / TV/SAT |  Red |  5 |  5 |
|  Red / TV/SAT |  AV |  6 |  6 |
|  Green / TV/Radio |  Green |  7 |  7 |
|  Green / TV/Radio |  TV/R |  8 |  8 |
|  Yellow / Zoom |  Yellow |  9 |  9 |
|  Yellow / Zoom |  Eject |  0 |  0 |
|  Blue / List |  Blue |  Fav |  Pre Ch |
|  Blue / List |  List |  Mute |  Mute |
|  Audio |  Dual |  Up |  Up |
|  M/P |  Smart |  Left |  Left |
|  Timer |  Shift + AV |  OK |  Ok |
|  Timer |  Sleep |  Right |  Right |
|  Info |  Info |  Down |  Down |
|  1 |  1 |  CH+ |  Ch + |
|  2 |  2 |  CH- |  Ch - |
|  3 |  3 |  Vol+ |  Vol + |



