


 


 





 
 

 


 







 
 










 








 
 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Sleep		Sleep / Timer
			Shift + 1
			Shift + 2
	CH.List		Smart / List
	Source		AV / Input / RDS
	Up		Up
	Audio / Nicam		Audio / Lang I/II
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Vol+		Vol+
	Mouse On/Off		D.Menu / Top
	CH+		CH+ / Page+
	Vol-		Vol-
	Home		Shift + Menu /
	CH-		CH- / Page-
	P.Mode		Picture / Format
	S.Mode		Sound / Title





Original		Replacement		Original		Replacement	
	Display		Display / Media		Yellow		Yellow / YouTube / Repeat
	Fav		Fav / Marker / PC		Blue		Blue / Prime Video / Random
	TXT		Text / Goto				
	Sub / Index		Subtitle / EQ				
	EPG / S.Page		Guide / EPG / -/-				
	Size		Zoom / Size				
	Stop		Stop / Hold				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Hold / Aspect		Setup / OPT /				
	Hold / Aspect		Shift + Stop /				
	Play / Pause		Play / Slow				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Reveal / Antena		TV/Radio /				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				

