

 



 



 

 

 

 

 

 

 

 

 

 



 





 





Original	Replacement
 Standby	 Power
 AQT/Auto/Open/CI	 Eject / Surround
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 List/Angle	 Smart / List
 Aspect	 Shift + Picture / Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Back	 Back / Return

Original	Replacement
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Audio	 Audio / Lang I/II
 CH-	 CH- / Page-
 Sub-T	 Subtitle / EQ
 Menu	 Menu / Home
 [i+]/Info	 Info / Angle
 Input	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 DVD Setup	 Shift + 2





Original	Replacement
 Rec	 Rec / Rec Mode
 Sleep	 Sleep / Timer
 Red/D.Prog	 Red / Netflix / Search
 Tv/R	 TV/Radio /
 Green/Step	 Green / APP / Repeat
 Yellow/RPT	 Yellow / YouTube / Repeat
 Blue/A-B/SCR	 Blue / Prime Video / Random
 [=]/Slow	 Shift + Play /
 [=▲]/Stop	 Shift + Up
 [=▼]/Zoom	 Shift + Down
 [=i]/I<<	 I<< / Preset-
 Play	 Play / Slow
 [=+]/Pause	 Pause / Step / Freeze
 [=+]/>>I	 >>I / Preset+
 [=?]/<<	 << / Tune-
 EPG/D.Menu	 Guide / EPG / -/--
 [=o]/>>	 >> / Tune+

Original	Replacement
 ♥-/D.Disp	 Shift + Guide / EPG / -/--
 ♥/D.Title	 Fav / Marker / PC
 ♥+/D.Goto	 Text / Goto

