



Original	Replacement
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
	Menu / Home
	Info / Angle
I-II	Audio / Lang I/II

Original	Replacement
	Mute / Dimmer
	Left
	Up
	Right
OK	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Netflix / Search
	Red / Sound / Title
	Green / APP / Repeat
	Green / Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





	Original	Replacement		Original	Replacement
	[≡o]	Sleep / Timer			
	Hold	Stop / Hold			
	[≡X]	Exit / Cancel / Clear			
	Mix / PIP Swap	Smart / List			
	PIP / Size	Zoom / Size			
	PIP Down / [≡?]	I<< / Preset-			
	PIP Up / Index	>>I / Preset+			
	[TV]	TV/Radio /			
	[AV]	AV / Input / RDS			

