





 
 

 
 



 
 


 
 
 
 



 



 
 




















 
 
 


 
 

 


 









| Original  | Replacement  | Original  | Replacement   |
|---|--|---|---|
|  Standby       |  Power          |  Right                   |  Right   |
|  Display       |  Shift + Info   |  Down                    |  Down    |
|  Nicam / Eject |  Eject          |  Source                  |  AV      |
|  Mute          |  Mute           |  Exit                    |  Exit    |
|  P.Mode        |  Shift + Format |  1                       |  1       |
|  S.Mode        |  Shift + Dual   |  2                       |  2       |
|  Sleep         |  Sleep          |  3                       |  3       |
|  Aspect        |  Format         |  4                       |  4       |
|  Vol -         |  Vol -          |  5                       |  5       |
|  Vol +         |  Vol +          |  6                       |  6       |
|  CH -         |  Ch -          |  7                      |  7      |
|  CH +        |  Ch +         |  8                     |  8     |
|  LCD-Menu    |  Menu         |  9                     |  9     |
|  DVD-Setup   |  Options      |  0                     |  0     |
|  Up          |  Up           |  Recall                |  Back  |
|  Left        |  Left         |  Text / Audio          |  Text  |
|  Enter       |  Ok           |  Hold / A-B / Rec List |  Smart |





| Original  | Replacement   | Original  | Replacement   |
|---|---|---|---|
|  Rec                 |  Rec           |  I> Step       |  Shift + Pause |
|  Time Shift          |  Media         |  >>            |  >>>           |
|  Red / Repeat        |  Red           |  Subtitle      |  Subt          |
|  Red / Repeat        |  Shift + Text  |  EPG / Program |  Guide         |
|  Green / Zoom        |  Green         |  FAV           |  Pre Ch        |
|  Green / Zoom        |  Shift + Eject |  EPG / Program |  Shift + Sleep |
|  Yellow / Angle      |  Yellow        |  Info / Title  |  Info          |
|  Blue / Goto         |  Blue          |   |   |
|  Index / I<<         |  I<<           |   |   |
|  Size / Stop        |  Stop         |   |   |
|  Rev. / Play/Pause |  Play        |   |   |
|  Rev. / Play/Pause |  Pause       |   |   |
|  Sub.P / >>>I      |  >>>I        |   |   |
|  TV/Radio / <<<    |  <<<         |   |   |
|  TV/Radio / <<<    |  TV/R        |   |   |
|  Lang / Menu       |  Dual        |   |   |
|  Lang / Menu       |  D. Menu     |   |   |

