



| Original  |                | Replacement   |        | Original  |           | Replacement   |         |
|---|----------------|---|--------|---|-----------|---|---------|
|    | Power          |    | Power  |    | Eco       |    | 3D      |
|    | Sleep          |    | Sleep  |    | Vol+      |    | Vol +   |
|    | CBL/SAT        |    | 1      |    | Vol-      |    | Vol -   |
|    | DVD            |    | 2      |    | Mute      |    | Mute    |
|    | Blu-ray        |    | 3      |    | CH/Page+  |    | Ch +    |
|    | Game           |    | 4      |    | CH/Page-  |    | Ch -    |
|    | AUX1           |    | 5      |    | Info      |    | Info    |
|    | Media Player   |    | 6      |    | Option    |    | Options |
|    | TV/Audio       |    | 7      |    | Back      |    | Back    |
|    | AUX2           |    | 8      |    | Setup     |    | Menu    |
|   | Tuner          |   | 9      |   | Up        |   | Up      |
|  | iPod/USB       |  | Guide  |  | Down      |  | Down    |
|  | CD             |  | 0      |  | Right     |  | Right   |
|  | Bluetooth      |  | Pre Ch |  | Left      |  | Left    |
|  | Online Music   |  | Media  |  | Enter     |  | Ok      |
|  | Phono          |  | Smart  |  | I<</Tune- |  | I<<     |
|  | Internet/Radio |  | TV/R   |  | Play      |  | Play    |







| Original  |                | Replacement   |        | Original  |                | Replacement   |         |
|---|----------------|---|--------|---|----------------|---|---------|
|    | Power          |    | Power  |    | CH/Page+       |    | Ch +    |
|    | Sleep          |    | Sleep  |    | CH/Page-       |    | Ch -    |
|    | CBL/SAT        |    | 1      |    | Mute           |    | Mute    |
|    | DVD            |    | 2      |    | Vol+           |    | Vol +   |
|    | Blu-ray        |    | 3      |    | Vol-           |    | Vol -   |
|    | Game           |    | 4      |    | Up             |    | Up      |
|    | AUX1           |    | 5      |    | Down           |    | Down    |
|    | Media Player   |    | 6      |    | Right          |    | Right   |
|    | TV/Audio       |    | 7      |    | Left           |    | Left    |
|   | AUX2           |   | 8      |   | Enter          |   | Ok      |
|  | Tuner          |  | 9      |  | Back           |  | Back    |
|  | iPod/USB       |  | Guide  |  | I<</Tune-      |  | I<<     |
|  | CD             |  | 0      |  | Play           |  | Play    |
|  | Bluetooth      |  | Pre Ch |  | Pause          |  | Pause   |
|  | Online Music   |  | Media  |  | Tune+/>>I      |  | >>I     |
|  | Phono          |  | Smart  |   | Smart Select 1 |  | D. Menu |
|  | Internet Radio |  | TV/R   |   | Smart Select 2 |  | Text    |



