



Original	Replacement	Original	Replacement
 Power	 Power	 Play	 Play
 Eco	 3D	 Pause	 Pause
 CH/Page+	 Ch +	 Stop	 Stop
 CH/Page-	 Ch -	 Home	 Smart
 Sleep	 Sleep	 >>I/Tune+	 >>I
 Mute	 Mute	 I<</Tune-	 I<<
 Volume+	 Vol +	 >>	 >>
 Volume-	 Vol -	 <<	 <<
 Info	 Info	 Green/Movie	 Green
 Option	 Options	 Red/Music	 Red
 Setup	 Menu	 Blue/Game	 Blue
 Back	 Back	 Yellow/Pure	 Yellow
 Up	 Up	 1	 1
 Enter	 Ok	 2	 2
 Down	 Down	 3	 3
 Right	 Right	 4	 4
 Left	 Left	 5	 5



 







 




 
 




 
 


 



 


 





Original	Replacement
	6
	7
	8
	9
	0
	Smart Select 1
	Smart Select 2
	Smart Select 3
	TV Audio
	Smart Select 4
	CBL/SAT
	DVD
	Blu-ray
	AUX1
	Tuner
	Bluetooth
	Game
	Text
	AV
	Format
	TV/R
	D. Menu
	Shift + 1
	Shift + 2
	Shift + 3
	Shift + 4
	Shift + 5
	Shift + 6
	Shift + 7

Original	Replacement
	Phono
	AUX2
	USB
	Media Player
	Internet Radio
	CD
	Online Music
	Shift + 9
	Shift + 8
	Guide
	Shift + Guide
	Pre Ch
	Shift + 0
	Shift + Pre Ch





Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >>
 CH/Page+	 Ch +	 <<	 <<
 CH/Page-	 Ch -	 >> /Tune+	 >>
 Sleep	 Sleep	  <</Tune-	  <<
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format



 
 
 



 


 





 


 


 
 

 




 

 



Original	Replacement
Smart Select 4	ECO 3D 3D
TV Audio	SEARCH TV/R TV/R
Media Player	SHIFT + GUIDE Shift + Guide
Internet Radio	FAV PRE-CH Pre Ch
CBL/SAT	SHIFT + 1 Shift + 1
DVD	SHIFT + 2 Shift + 2
Blu-ray	SHIFT + 3 Shift + 3
AUX1	SHIFT + 4 Shift + 4
Tuner	SHIFT + 5 Shift + 5
Bluetooth	SHIFT + 6 Shift + 6
Game	SHIFT + 7 Shift + 7
AUX2	SHIFT + 8 Shift + 8
Phono	SHIFT + 9 Shift + 9
USB	GUIDE Guide
CD	SHIFT + 0 Shift + 0
Online Music	SHIFT + FAV PRE-CH Shift + Pre Ch

Original	Replacement





Original	Replacement	Original	Replacement
 Power	 Power	 >> /Tune+	 >>
 CH/Page+	 Ch +	  <</Tune-	  <<
 CH/Page-	 Ch -	 <<	 <<
 Sleep	 Sleep	 >>	 >>
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format





Original	Replacement
Smart Select 4	3D
TV Audio	TV/R
Media Player	Shift +  Guide
Internet Radio	Pre Ch
CBL/SAT	Shift + 1
DVD	Shift + 2
Blu-ray	Shift + 3
AUX1	Shift + 4
Tuner	Shift + 5
Bluetooth	Shift + 6
Game	Shift + 7
AUX2	Shift + 8
Phono	Shift + 9
USB	Guide
CD	Shift + 0
Online Music	Shift +  Pre Ch

Original	Replacement

