



Original	Replacement	Original	Replacement
Standby	Power	Right	Right
Info	Info / Angle	Vol+	Vol+
Subtitle	Subtitle / EQ	Record	Rec / Rec Mode
Mute	Mute / Dimmer	Down	Down
I<<	I<< / Preset-	CH-	CH- / Page-
Play	Play / Slow	Stop	Stop / Hold
<<	<< / Tune-	1	1
>>I	>>I / Preset+	2	2
Pause	Pause / Step / Freeze	3	3
>>	>> / Tune+	EPG	Guide / EPG / -/-
Menu	Menu / Home	4	4
Up	Up	5	5
CH+	CH+ / Page+	6	6
Exit	Exit / Cancel / Clear	Back	Back / Return
Left	Left	7	7
Vol-	Vol-	8	8
OK	OK	9	9





Original	Replacement
 0	 0
 Media	 Display / Media
 USB	 Shift + 8
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 TTX	 Text / Goto
 Timer	 Sleep / Timer
 FAV	 Fav / Marker / PC
 Res	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

