

 


 
 

 




 


 
 





 

 
 

 

 
 
 

 
 

 
 




 
 
 

 
 

 
 
 
 

 


 
 









 







Original		Replacement		Original		Replacement	
	Power		Power		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Up		Up
	3		3		Down		Down
	4		4		Left		Left
	5		5		Right		Right
	6		6		Ok		Ok
	7		7		PgUp		>>
	8		8		PgDn		<<
	9		9		Tv/Radio		TV/R
	0		0		Info		Info
	Mute		Mute		Audio		Dual
	Recall		Back		FAV		Pre Ch
	Menu		Menu		Sub-T		Subt
	Exit		Exit		TTX		Text
	CH+		Ch +		EPG		Guide
	CH-		Ch -		Play		Play





Original	Replacement	Original	Replacement
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		
 Rew	 <<		
 Fwd	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue/SOS	 Blue		

