 
 








 


 

 





Original	Replacement
	 Power
	 Info / Angle
	 Audio / Lang I/II
	 Mute / Dimmer
	 Subtitle / EQ
	 Fav / Marker / PC
	 Shift + Up
	 Text / Goto
	 Guide / EPG / -/--
	 Shift + Down
	 Menu / Home
	 CH+ / Page+
	 Up
	 Exit / Cancel / Clear
	 Left
	 Vol-
	 OK

Original	Replacement
	 Right
	 Vol+
	 Smart / List
	 CH- / Page-
	 Down
	 Back / Return
	 1
	 2
	 3
	 Picture / Format
	 4
	 5
	 6
	 TV/Radio /
	 7
	 8
	 9





Original	Replacement
0	0
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>	>> / Preset+
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Red/Timer	Sleep / Timer
Red/Timer	Red / Netflix / Search
Eject	Eject / Surround
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Replacement

