

 


 
 

 


 
 

 
 


 

 
 


 

 
 

 








 



 

 



 


















 




	Original	Replacement	Original	Replacement	
	Standby		Power		Tv Menu
	Source		AV / Input / RDS		DVD Menu
	Eject		Eject / Surround		Up
	1		1		Left
	2		2		Enter
	3		3		Play
	4		4		Right
	5		5		Vol+
	6		6		Down
	7		7		PR+
	8		8		Vol-
	9		9		PR-
	[■]/Wide		Zoom / Size		Red
	0		0		<< / Tune-
	Recall		Back / Return		>> / Tune+
	Picture		Picture / Format		Green
	Setup		Setup / OPT /		Yellow
					Menu / Home
					D.Menu / Top
					Up
					Left
					OK
					Play / Slow
					Right
					Vol+
					Down
					CH+ / Page+
					Vol-
					CH- / Page-
					Red / Netflix / Search
					<< / Tune-
					>> / Tune+
					Green / APP / Repeat
					Yellow / YouTube / Repeat



