









Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Power Tv	 Shift + Power
 V-Format	 Picture / Format
 Zoom	 Zoom / Size
 Tv/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0

Original	Replacement
 Text	 Text / Goto
 Red/Mosaic	 Red / Netflix / Search
 Green/Sleep	 Green / APP / Repeat
 Green/Sleep	 Shift + Sleep / Timer
 Yellow/Audio	 Yellow / YouTube / Repeat
 Yellow/Audio	 Audio / Lang I/II
 Blue/List	 Blue / Prime Video / Random
 Blue/List	 Smart / List
 Page Up	 Shift + CH+ /
 Page Down	 Shift + CH- /
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down





Original	Replacement
Vol+	Vol+
i/Info	Info / Angle
PR+	CH+ / Page+
Vol-	Vol-
Guide	Guide / EPG / -/-
PR-	CH- / Page-
Last	I<< / Preset-
<<<	<<< / Tune-
Play/Pause	Play / Slow
>>>	>>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Time Shift	AV / Input / RDS
Option	Setup / OPT /
Media	Display / Media
Pause	Pause / Step / Freeze
PIP	D.Menu / Top

Original	Replacement
Swap	Exit / Cancel / Clear
Timer	Sleep / Timer

