 

 
 
 



 


 
 
 


 

 





 







 


 



 
 


 


 
 
 

 
 
 
 
 
 
 


 
 

 









	Original	Replacement		Original	Replacement		
	Power		Power		Search		TV/R
	Open / Close		Eject		Setup		Options
	1		1		Title		List
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		Enter		Ok
	7		7		PBC		Smart
	8		8		Menu		Menu
	9		9		Audio		Dual
	0		0		Zoom		Shift + Eject
	10 +		Guide		USB / Card		Media
	Display		Info		Step II >		Shift + Pause
	Subtitle		Subt		Stop		Stop
	Vol +		Vol +		Play / Pause		Play
	Vol -		Vol -		Play / Pause		Pause





Original		Replacement		Original	Replacement
	I<< Prev		I<<		
	Next >>I		>>I		
	<< Rev		<<		
	Fwd >>		>>		
	L / R	 + 	Shift + Dual		
	N / P		3D		
	Angle		Format		
	Mute		Mute		
	Program		Sleep		
	Clear		Exit		
	Repeat		Text		
	A - B	 + 	Shift + Text		
	V - Mode		Green		
	TV - Mode		Yellow		
	Slow	 + 	Shift + Play		
	Return		Back		

