




 




Original	Replacement
 Standby	 Power
 Open/Close	 Eject / Surround
 Prog	 TV/Radio /
 1	 1
 2	 2
 3	 3
 V-Mode	 Picture / Format
 4	 4
 5	 5
 6	 6
 A-Mode	 Sound / Title
 7	 7
 8	 8
 9	 9
 Setup	 Setup / OPT /
 Goto	 Text / Goto
 10+	 Guide / EPG / -/-

Original	Replacement
 0/10	 0
 Title	 Shift + Sound / Title
 Menu	 Menu / Home
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Step	 Shift + Pause / Step /
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





Original	Replacement
 I<<	 I<< / Preset-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 >>	 >>  / Preset+
 Vol+	 Vol+
 Key+	 CH+ / Page+
 Virtual	 Shift + Display / Media
 OSD	 Display / Media
 Vol-	 Vol-
 Key-	 CH- / Page-
 Nothing	 Shift + Setup / OPT / Tools
 Zoom	 Zoom / Size
 Mute	 Mute / Dimmer
 L/R/ST	 Smart / List
 Tone	 Exit / Cancel / Clear
 S.Effect	 AV / Input / RDS

Original	Replacement

