




 
 



 
 




 









Original	Replacement
 Power	 Power
 3D	 3D
 Tv Input	 TV/R
 AV Input	 AV
 Menu	 Menu
 [+] / Aspect	 Format
 N	 D. Menu
 (<>) / Surround	 Dual
 i	 Info
 X / Exit	 Exit
 Internet	 Smart
 Viera Tools	 Media
 Guide	 Guide
 Option	 Options
 Return/Back	 Back
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [=] / Text	 Text
 [=♦] / STTL	 Subt
 [=i] / Index	 List
 [=+] / Hold	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Replacement	
	7		7
	8		8
	9		9
	0		0
	Last View		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Second Power		Shift + Power
	Programme Up		Shift + Ch +
	Programme		Shift + Ch -
	<</ <<		<<
	Play		Play
	>>/>>		>>
	Stop		Stop

Original		Replacement	
	Pause/Step		Pause
	Rec		Rec

